

MI-COMBI-90-P

MI STAINLESS STEEL COMBI UNIT 90 DEGREE - P-TRAP



BOX CONTENTS:

- 1 x S/S Combi Unit
- 4 x m10 x 50mm S/S Dynabolts


Note: These instructions are to be used in conjunction with the installation instructions from the flushing device manufacturer.

Installation of this product shall be in accordance with the requirements of AS/NZS 3500 Series.

Please inspect your new toilet pan before installation, no claims will be accepted after installation is completed.

INSTRUCTIONS

1. Remove Combi unit from box and ensure all required items are present
2. Place Combi pan in position on finished floor, remove side panels and mark fixing hole positions on floor. Some units are rear fixing only (if ordered) for this all markings will need to be made from the rear of the unit. The unit is also provided with 6 rear fixing holes (M12), suggested fixings to suit are 12mm threaded rod, nuts and washers
3. Remove pan and drill floor fixing holes (M10 for use with provided dynabolts)
4. Replace Combi unit into position, connecting inlet and outlet pipework (basin trap and waste not provided)
5. Fix pan to floor and replace side panels (if provided with this model)
6. It is recommended to use a silicone / adhesive around the entire perimeter of the Combi unit for better adhesion and aesthetics
7. Test pan for flushing adequacy **

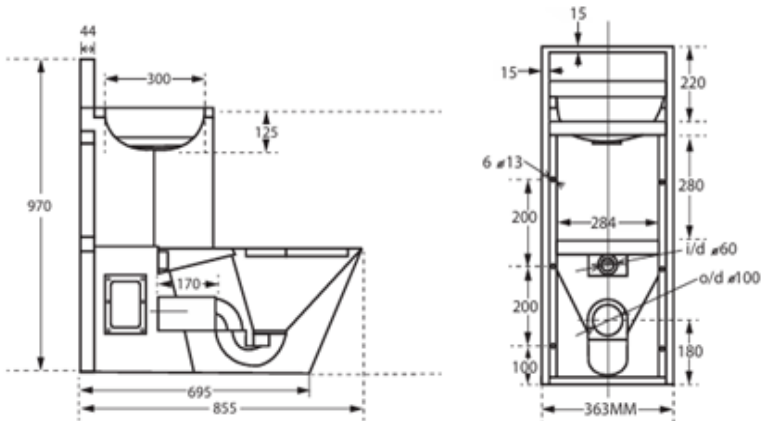

** If flush test results are inadequate, check flushing device for adequate flow

TROUBLESHOOTING

For any further assistance with this product please refer to your nearest MacDonald Industries office.

Find your nearest MacDonald Industries office at: www.macdonaldindustries.com.au