

MI-WFPA-X

MI STAINLESS STEEL FLOOR MOUNTED AMBULANT TOILET PAN - P-TRAP



BOX CONTENTS:

- 1 x S/S Disabled Wall Faced Pan
- 4 x m10 x 50mm S/S Dynabolts

Note: These instructions are to be used in conjunction with the installation instructions from the flushing device manufacturer.

Installation of this product shall be in accordance with the requirements of AS/NZS 3500 Series.


Please inspect your new toilet pan before installation, no claims will be accepted after installation is completed.

MACDONALD INDUSTRIES AUSTRALIA LIMITED

INSTALLATION INSTRUCTIONS

INSTRUCTIONS

1. Remove pan from box and ensure all required items are present
2. Ensure all requirements of AS1428 are met
3. Place toilet pan in position on finished floor, remove side panels and mark fixing hole positions on floor
4. Remove pan and drill fixing holes (M10 for use with provided dynabolts)
5. Replace pan into position, connecting inlet and outlet pipework
6. Fix pan to floor and replace side panels
7. It is recommended to use a silicone / adhesive around the base of the pan to the floor for better adhesion and aesthetics
8. Test pan for flushing adequacy **

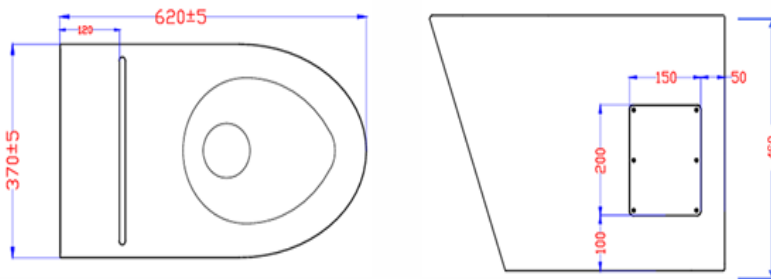

** If flush test results are inadequate, check flushing device for adequate flow

TROUBLESHOOTING

For any further assistance with this product please refer to your nearest MacDonald Industries office. Find your nearest MacDonald Industries office at: macdonaldindustries.com.au